



Forming:

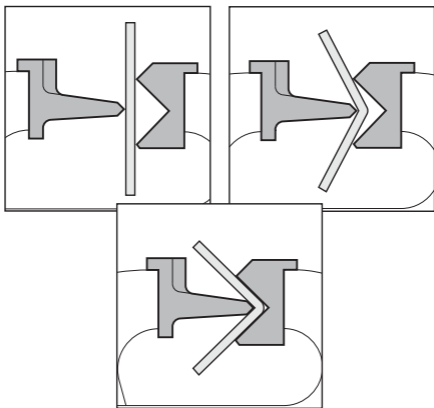


Close vise to bend metal pieces up to 90°.

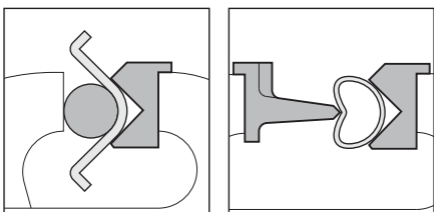


Use V-block and bar to create U-shapes.

Crimp tubing.



Clamping:

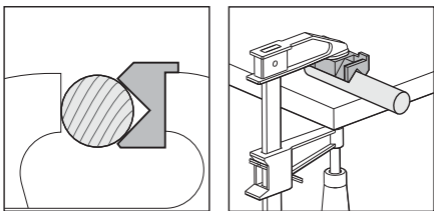

Hold rod, pipe or dowels in clamp or on work surface.

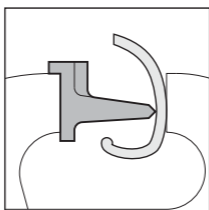

Hold odd shapes.

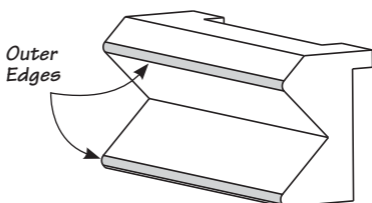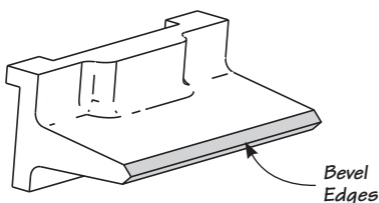

Note: Should the metal bender mar soft metal (e.g., brass, aluminum), use a belt sander or file to improve the surface finish of the V-block outer edges and the male die bevel edges.

veritas[®] Tools Inc.

814 Proctor Avenue
Ogdensburg, New York
13669-2205 USA

1090 Morrison Drive
Ottawa, Ontario
K2H 1C2 Canada

customerservice@veritastools.com

www.veritastools.com